


## PRESSURE SENSOR SPD015GA

This Smartec pressure sensor has an amplified analogue output. Via internal settings the sensor is compensated for offset, sensitivity, temperature drift and nonlinearity.

The sensor is available in the range from 5 to 100 psi. Other ranges on request. Available in Gauge and Absolute type. The output is ratiometric to the power supply voltage. @ 5 V power voltage the output span is 0.5 to 4.5 V.

The SPD analogue series can be considered as an “analogue” successor of the SPD series

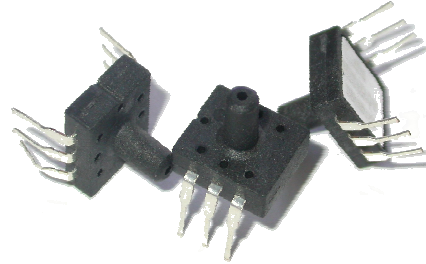

### Electrical Characteristics


Performance Characteristic at Vcc =5V excitation @ 25 °C.

Parameter	Min	Typ	Max	Units
Supply Voltage	2.7	5	5.5	V
Supply Current		2.5		mA
Pressure range (fs)		15		psi
Zero Output *)	0.481	0.5	0.519	Vdc
Span Output *)	3.981	4.00	4.019	Vdc
Max output current			2.2	mA
Accuracy **)		±0.5		%FS
Response time		25		ms
Pressure overload			3x	psi
Operating temperature	-20		85	°C
Storage temperature	-40		125	°C

Wetted materials are: Glass, RTV, PPA and silicon

\*) Output is ratiometric to supply voltage

\*\*) all errors included, temperature compensation over 50 °C

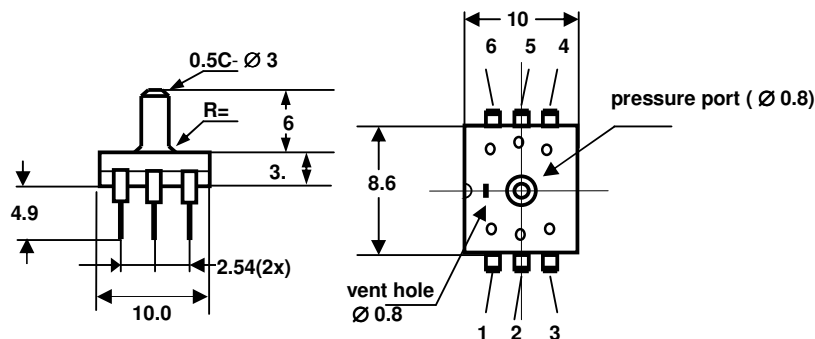

#### Pin Description

1	NC
2	NC
3	Vss
4	Vdd
5	Out
6	NC

Do NOT connect NC pins  
 Apply 100nF between Vss and Vdd